Document

254% | Continuous document | Validity off | Page 1 of 2

Document | Picture | Operation steps | Basic data | Tightening torques

MODEL 207, 212, 218

Model 207, 212.1/2, 218
Model 212.0 except engine 273 up to model year 2011
Model 212.0 with engine 273 as of model year 2011

1 Ground terminal
2 Cover
3 Positive line
4 Screw
5 Mounting rail
6 Venting hose

G1 On-board electrical system battery



P54.10-3189-11

15:04
19/08/2015


PDF created with pdfFactory Pro trial version www.pdffactory.com

P54.10-3189-11

Model 212.0 with engine 273 up to model year 2011


1 Ground terminal
2 Cover
3 Positive line
5 Mounting rail
6 Venting hose
7 Nut

G1 On-board electrical system battery

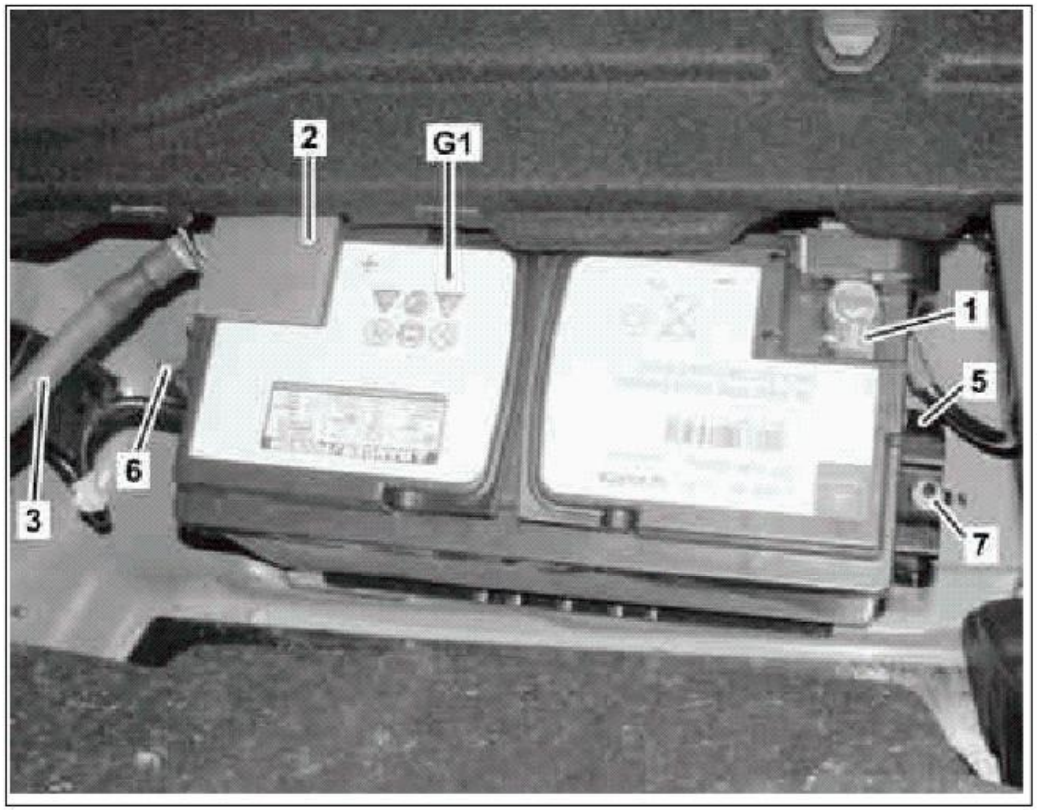

P54.10-3190-11

PDF created with pdfFactory Pro trial version www.pdffactory.com

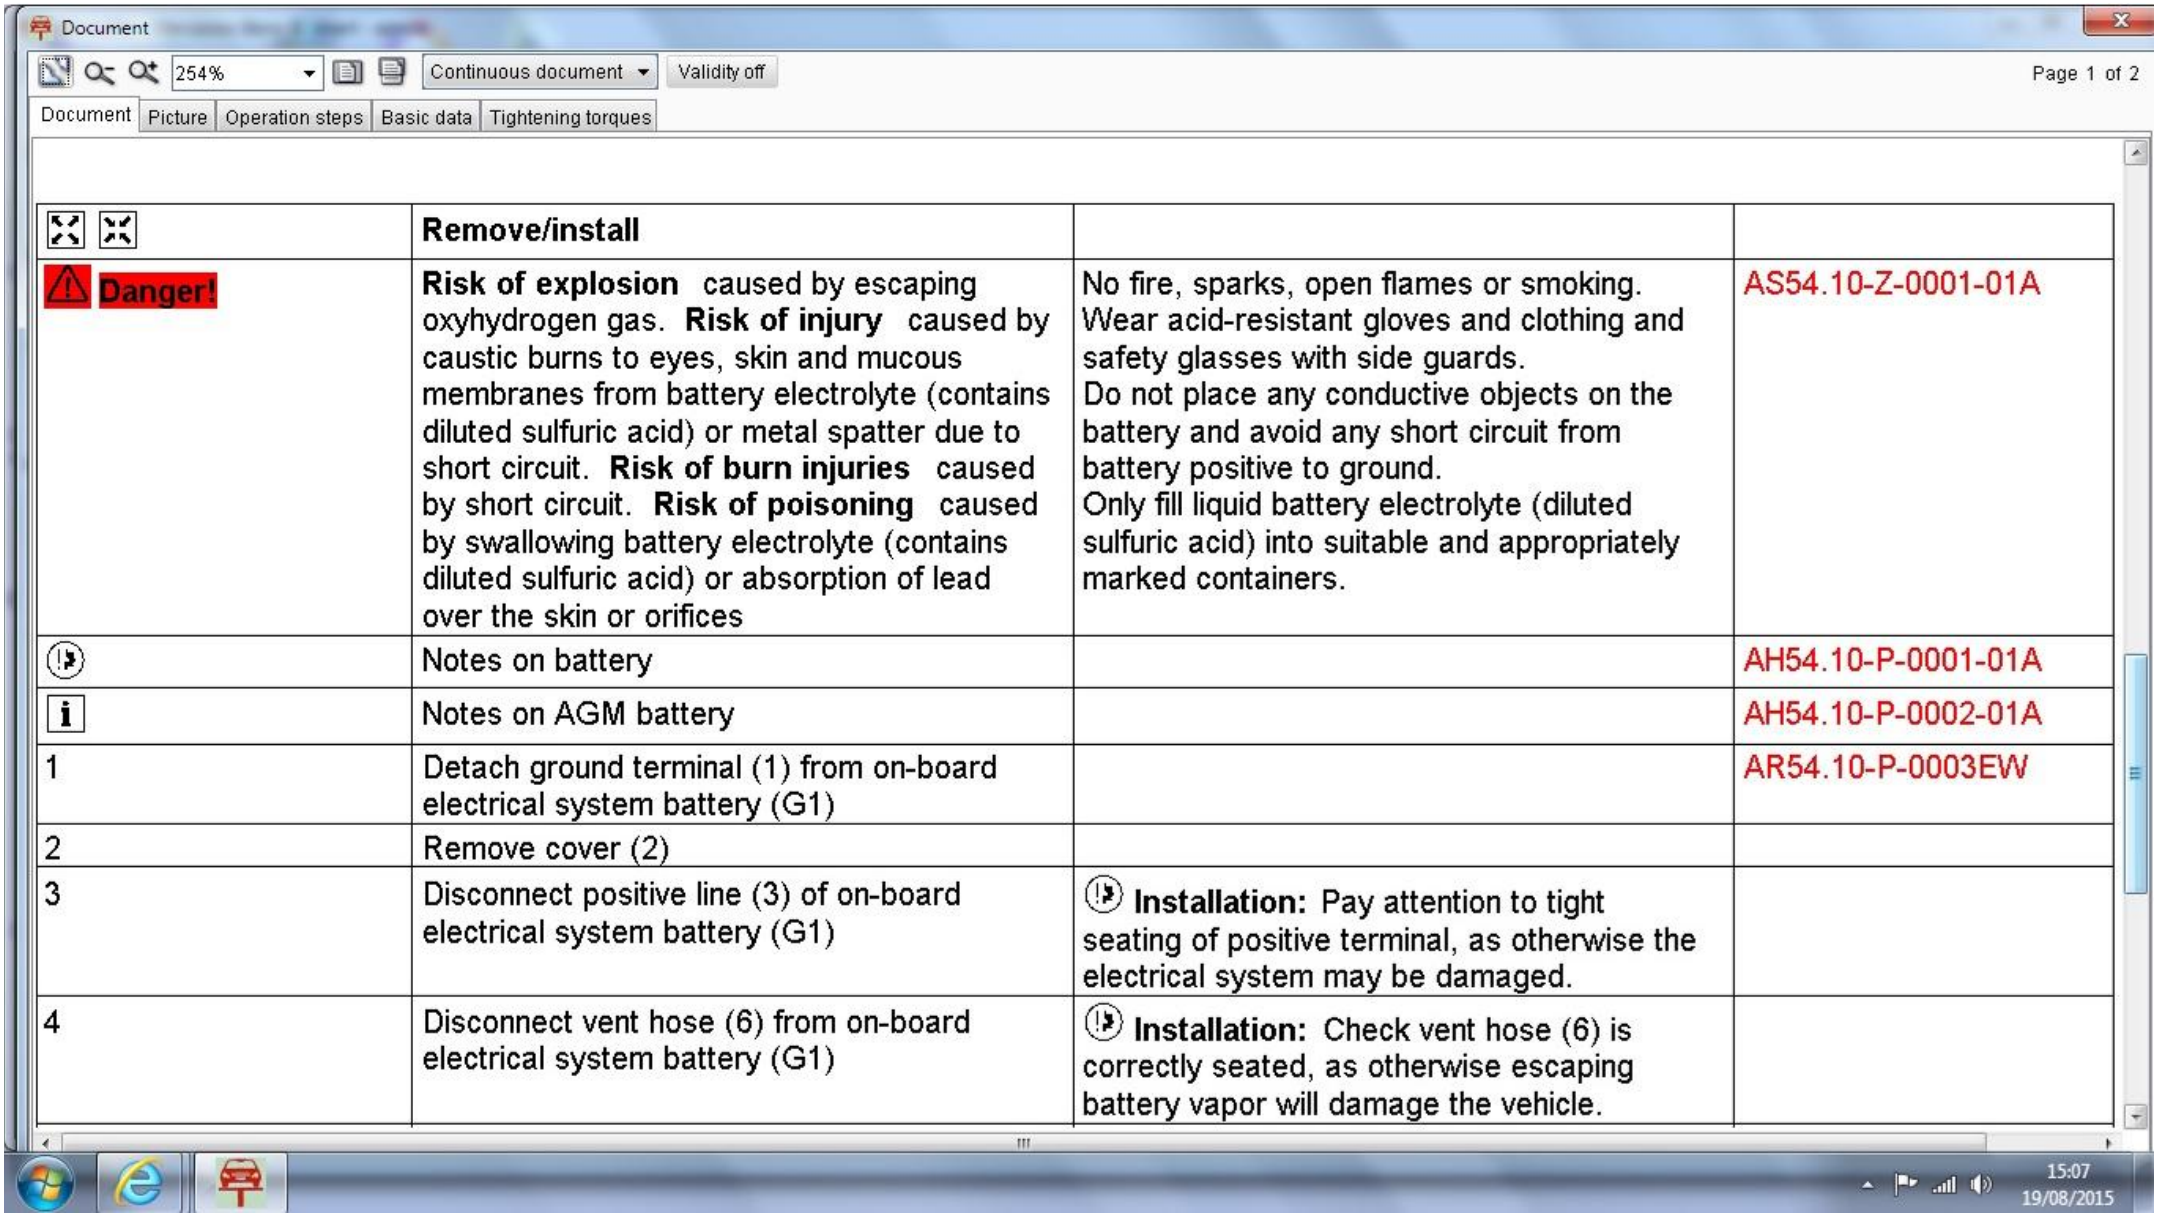

PDF created with pdfFactory Pro trial version www.pdffactory.com

		electrical system may be damaged.	
4	Disconnect vent hose (6) from on-board electrical system battery (G1)	**Installation:** Check vent hose (6) is correctly seated, as otherwise escaping battery vapor will damage the vehicle.	
5	Unscrew bolt (4) or nut (7) of mounting rail (5)	Two bolts (4) are fitted on model 207. Nm	*BA54.10-P-1001-01F
6 7	Remove mounting rail (5) Remove on-board electrical system battery (G1)		
8	Install in the reverse order		

Nm Battery

Number	Designation		Model 207	Model 212	Model 218
BA54.10-P-1001-01F	Nut/bolt securing battery mounting rail	Nm	21	21	21

PDF created with pdfFactory Pro trial version www.pdffactory.com